


F11/Central Florida TRACON: South Operations Vectoring Diagram

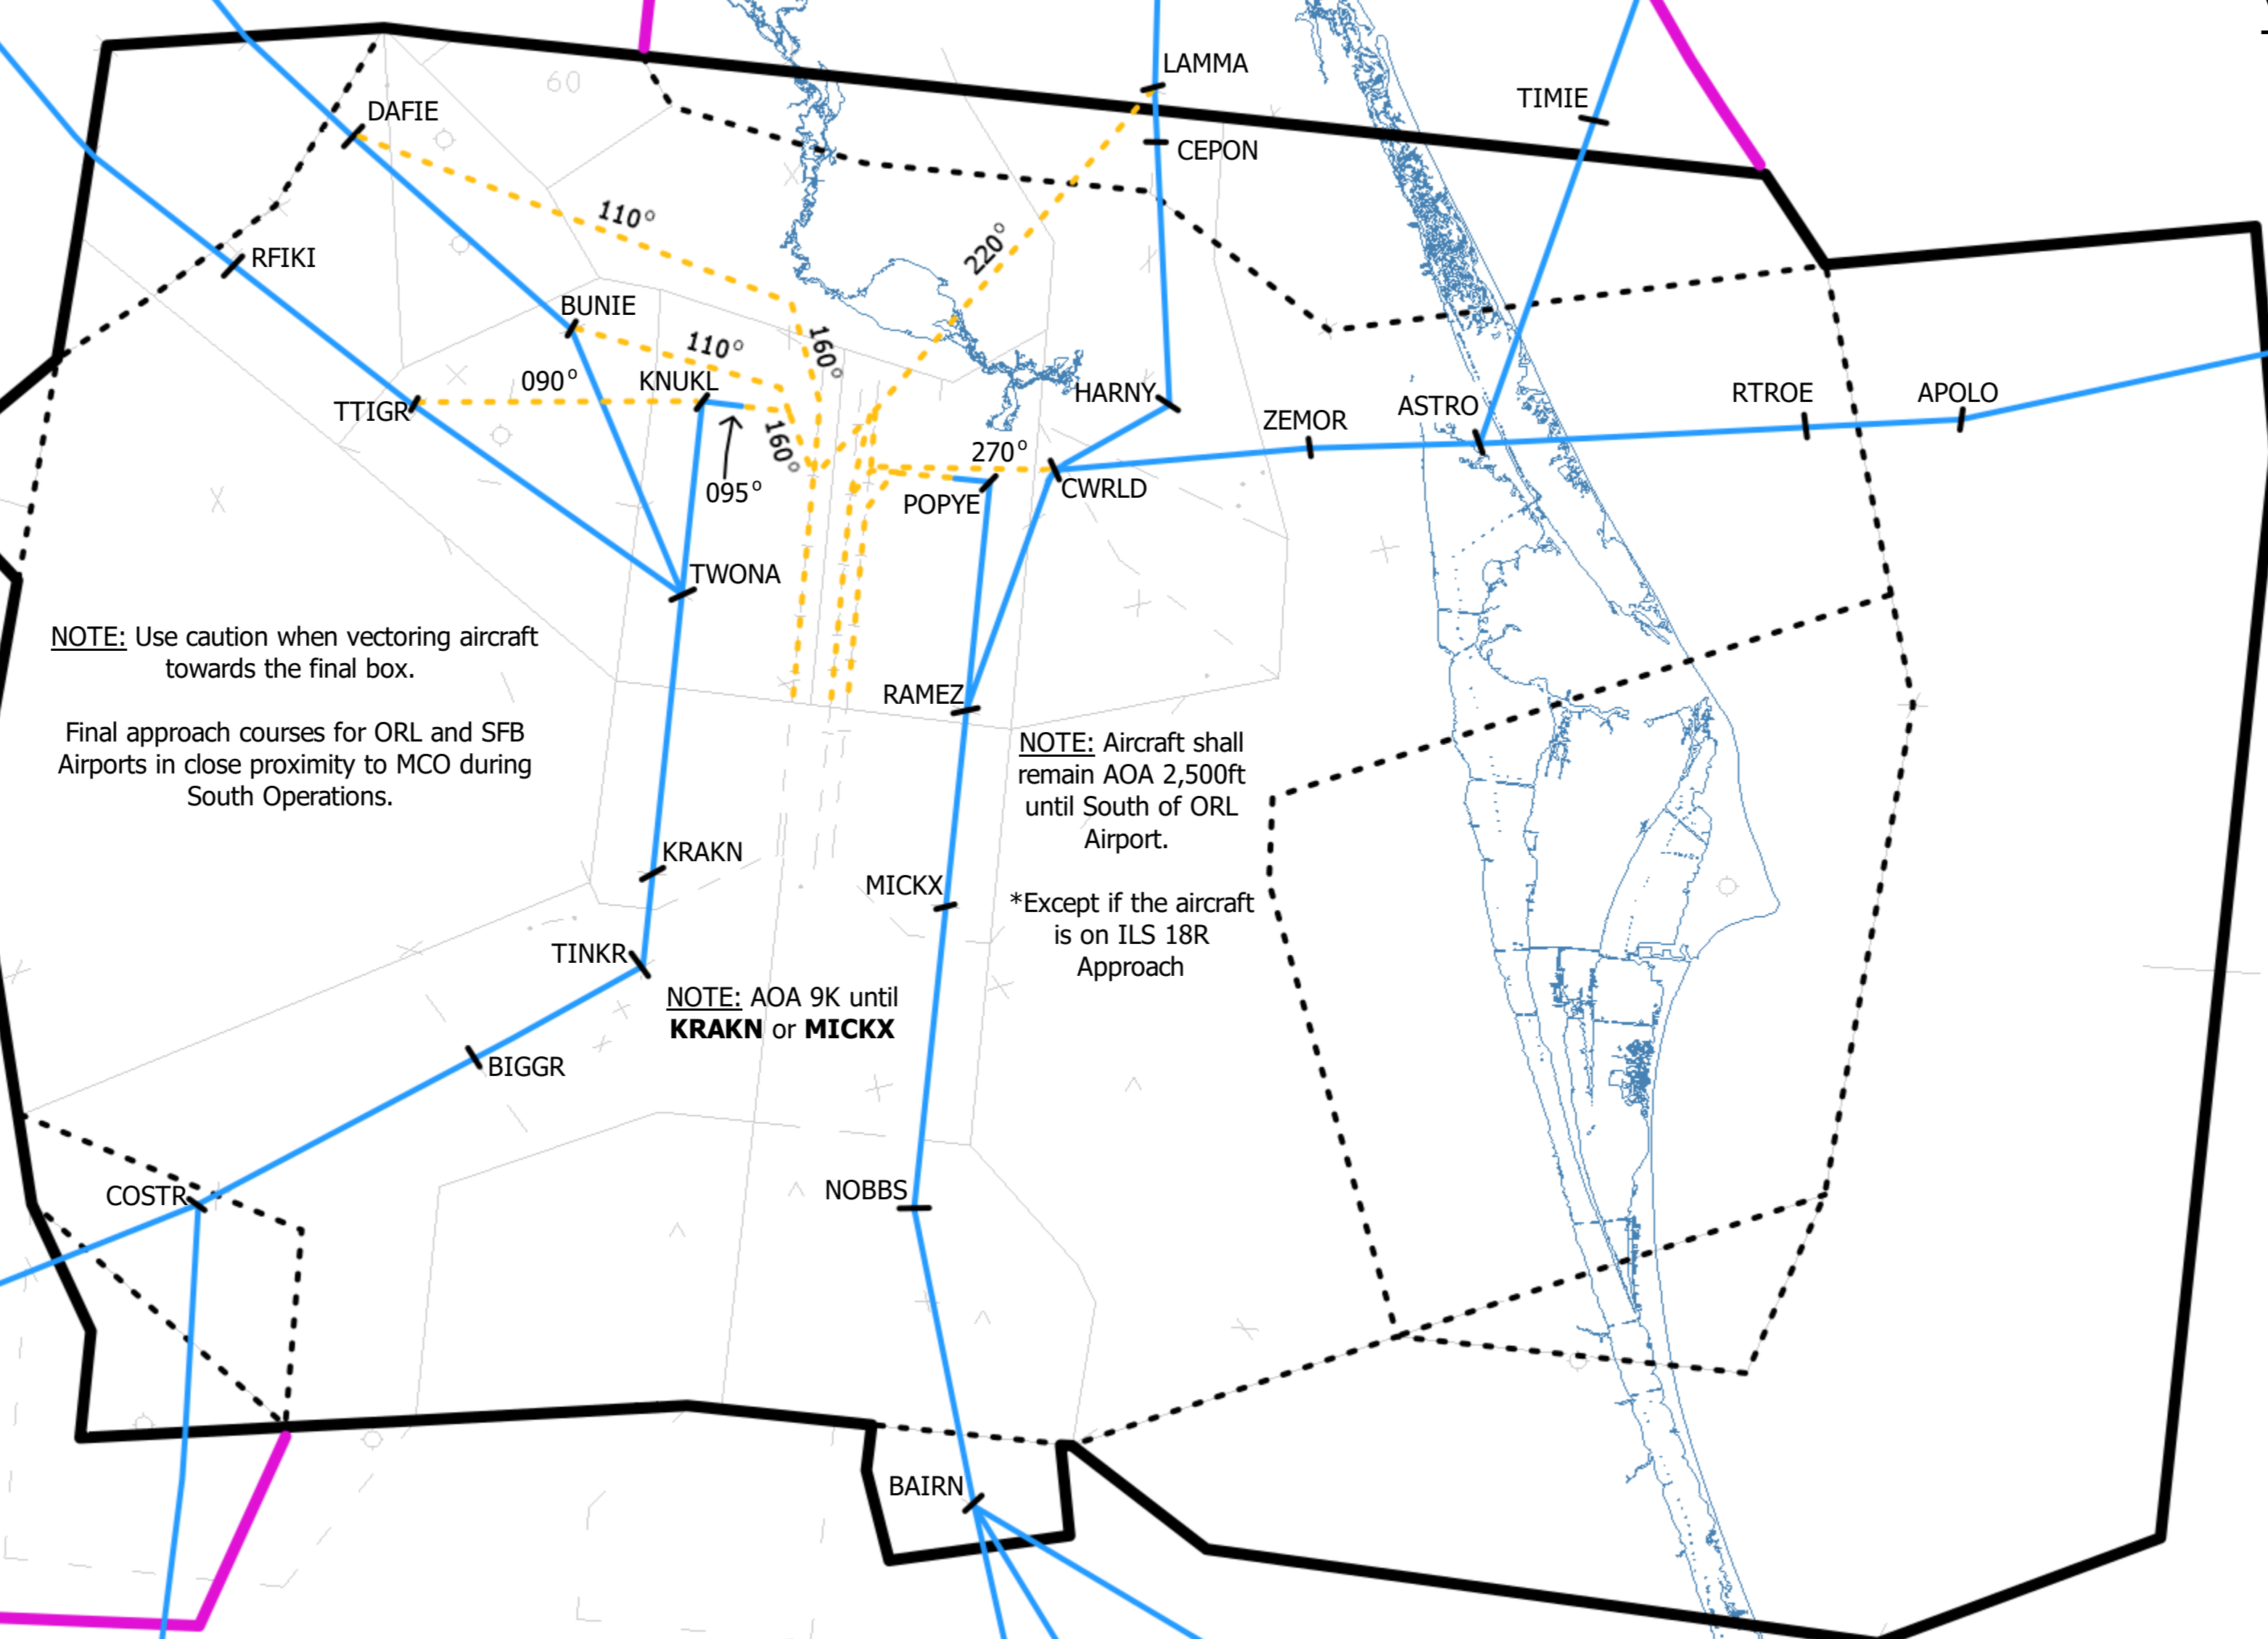

NOTE: Use caution when vectoring aircraft towards the final box.
Final approach courses for ORL and SFB Airports in close proximity to MCO during South Operations.

NOTE: Aircraft shall remain AOA 2,500ft until South of ORL Airport.
*Except if the aircraft is on ILS 18R Approach

NOTE: AOA 9K until **KRAKN** or **MICKX**